
NCR

GROUND STRAP INSTRUCTION

All printers, which are installed on a metallic or plastic-coated metallic stand, must be connected with a ground strap to a metallic area of the stand, to prevent ESD problems.

A) The NCR stand accessory 1001-A004 includes already a ground strap to connection to the printer frame.

B) If used a non NCR manufactured metallic stand, it must be connected, also be means of a ground strap. This ground strap with fastening parts can be ordered by Feature Kit K300.

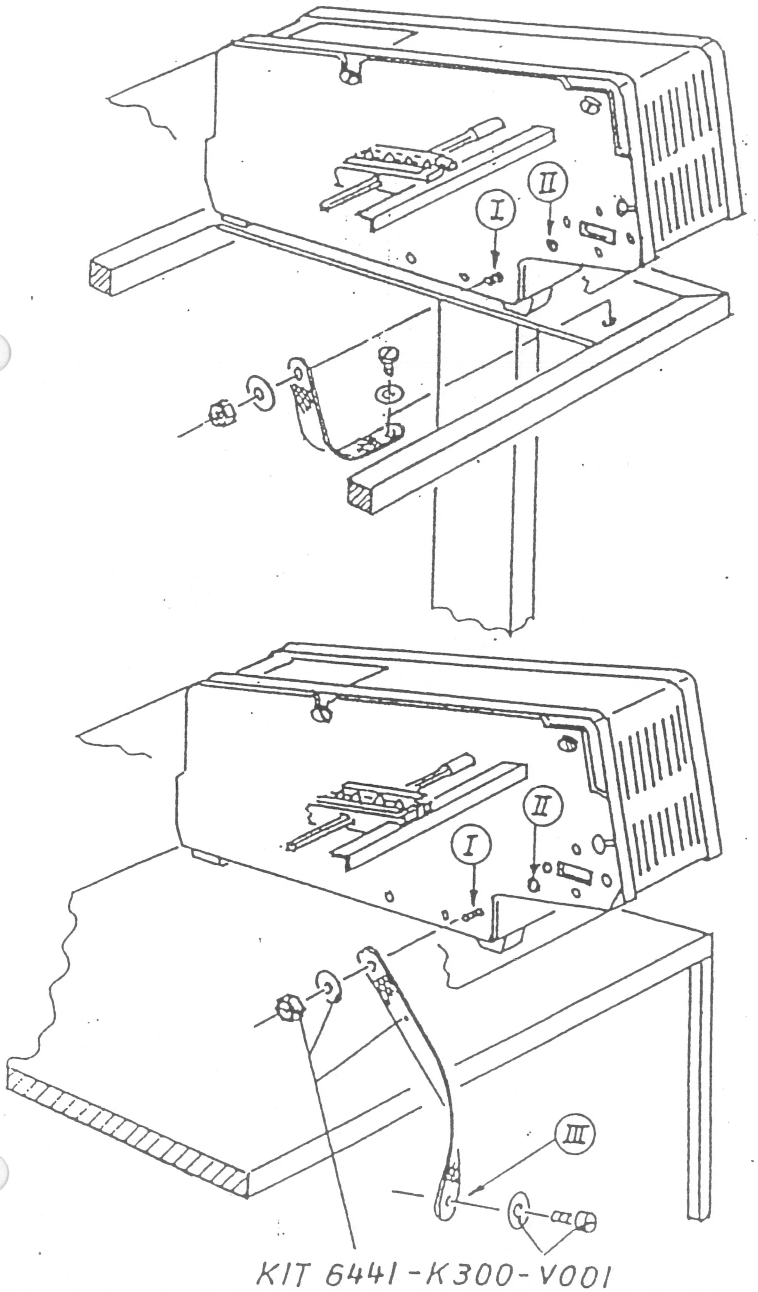

KIT 6441-K300-V001

A)

NCR STAND 1001-A004

I) Printer with Tr.-No. 5257 and up are prepaired with a extended screw.

II) For Printer up to including Tr.-No. 5256 use present hole to connection Ground Strap (Screw, Washer, and Nut are supplied with the stand)

B)

NON NCR MANUFAC. STAND

I) Printer with Tr.-No. 5257 and up are prepaired with a extended screw.

II) For Printer up to including Tr.-No. 5256 use present hole to connection Ground Strap (Screw, Washer, and Nut are supplied with the stand.)

III) Connect this Ground Strap end on a metallic blank area of the Stand. (If no suitable hole exists, provide a hole or threaded hole.)